

# 510 DL 6.0 CARTRIDGE VAPE

## INSTRUCTION MANUAL

### SPECS

Size: 3.68 x 1.95 x 1.07" (93.5 x 49.5 x 27.3 mm)  
Max Cart Size: 0.7 x 2" (18 x 51 mm) 3 g  
Battery Capacity: 1000 mAh  
Voltage: 1.8 – 4.2 V (1.8 V Pre-heat)  
Charging: USB-C

### KIT INCLUDES

1x Pulsar 510 DL 6.0 Battery  
1x Bottom Magnetic Connector

### CHARGING

Before using the DL 6.0, fully charge the device using a USB-C charging cable and a standard charging brick. You will see the screen turn on when the battery is charging unless you have "Stealth Mode" on (see below), then only the lighting bolt icon and battery percentage will show. Allow the battery to fully charge before the first use. When the battery indicator reaches 100%, the device is fully charged and can be unplugged.

### POWER ON/OFF

To power the device on and off, quickly press the button 5 times. It enters a standby mode after 5 seconds. To wake up the device, press the button on the bottom 1 time. The screen will turn on and show the current voltage and battery percentage. You can also pull from the mouthpiece and the device will be ready to vape.

### INSERT CARTRIDGE

Remove the bottom magnetic connector and firmly screw in the 510-threaded cartridge of your choice. Insert the cartridge into the device, then the screen will turn on to show a proper connection has been made.

### CHANGE VOLTAGE SETTINGS

Press and hold the power button to cycle through voltage settings (1.8 – 4.2 V) in increments of 0.1. Release button when it reaches your preferred setting. Or, you can click through the voltages by pressing the button once to go up 0.1. If you pass your preferred setting and it stops at 4.2 V, you can press the power button again to start the voltage back at 1.8 V.

### PRE-HEATING

Press the button on the bottom 2 times to activate the 8-second, 1.8 V pre-heat function. During this cycle, the screen animation will light up. You can stop the preheat at any time by pressing the button or inhaling from the mouthpiece.

### USAGE


The 510 DL 6.0 is equipped with auto draw functionality. Once the voltage setting has been selected, simply pull from the mouthpiece to activate the 10-second session timer.

### ADJUSTABLE AIRFLOW

You can adjust the airflow on the device by sliding open the airflow restriction valve at the bottom of the device, opposite from the charging port.

### STEALTH MODE

Press the button 3 times within 1.5 seconds to enter or exit Stealth Mode. This mode will turn off the screen entirely, but all other device functions will work normally. The lightning bolt icon and battery percentage will still turn on while the device is charging in Stealth Mode.

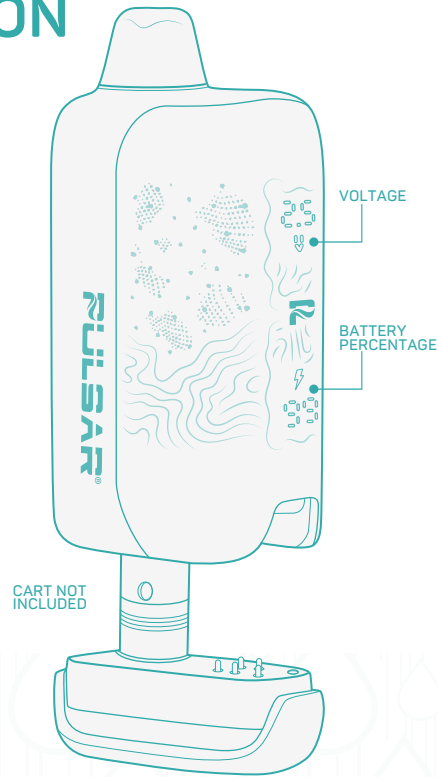

# PULSAR



# 510 DL<sup>6.0</sup> CARTRIDGE VAPE

## INSTRUCTION MANUAL

### PROTECTION FEATURES

Over-voltage / short-circuit protection: When the cartridge resistance is lower than 0.8 ohms, the screen flashes 4 times to indicate the device is powering off.

No cartridge: The screen flashes 3 times and enters standby mode.

### CLEANING INSTRUCTIONS

Remove the bottom magnetic connector from the battery. Wipe the outside and inside of the bottom magnetic connector with an isopropyl alcohol pad. Use an alcohol swab to wipe any excess oil out of the 510 connector. Clean inside the air pathway with an alcohol swab. Using a circular motion, work your way up and down the air pathway until you do not see any more oil.

Do not submerge any part of the device in a cleaning solution. Allow all parts to fully air dry prior to reassembly.

### WARNINGS

Do not expose to extreme temperatures or direct sunlight. Do not drop the device or accessories. Do not drop or submerge in any liquid. Do not modify the electronics in any way. This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty. Visit [PulsarShop.com](https://PulsarShop.com) for warranty information.