

Cleaning :

- To maintain the performance and extend the lifespan of your device, regular cleaning is essential. Follow these steps for optimal results:
- Cooling Period: Ensure the device has not been in use for at least 10 minutes before you begin cleaning.
 - Empty the chamber completely.
 - Use the brush tool to wipe the walls of the interior.
 - Wipe the mouthpiece with a damp cloth.

Caution:

Keep the device away from any environment involving strong acids, alkaline, combustible materials, water, or any other liquids.
 Do not keep in hot cars or store above the room temperature of 74F.
 Do not use damaged batteries. If the battery casing is damaged, discontinue use and safely recycle the battery.
 Do not use the battery if contacts become exposed to solid or liquid matter.
 Shorts can result in fire or an explosion of a battery.
 Do not touch coils when hot. Severe burns can result in.
 Do not touch hot material. Severe burns can result in.
 If the device gets too hot in use, please stop using it for a while.
 Not for use with nicotine or other nicotine salt products. Not an ENDS device.

Disclaimers:

People under 21 years of age are not permitted to purchase or use this device. Non-smokers, children, and women breastfeeding should not use this product. The device is not a medical device and is not intended to diagnose, cure or prevent any diseases or other conditions. The manufacturers and sellers will not be responsible for any consequential or incidental damage resulting from the sale or use of any merchandise.

Yocan[®]


HIT 2



Instruction Manual

Specification:

- Size: 124*40.5*32mm
- Coil Resistance: 0.5Ω
- Battery Capacity: 1800mAh
- Temperature Range: 200°F-480°F
- Session Timer: 3 Minutes
- Charging Type: 5V/1A Type-C
- Charging Time: 2.0h

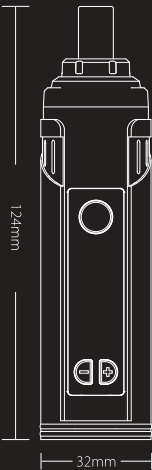

Package Content:

- 1x Hit 2 Device
- 1x Type-C Charging Cable
- 1x Cleaning Brush
- 1x Instruction Manual

How To Use:



1. Turn on/off: Quickly tap the power button 5 times within 2 seconds.
2. Pull out the magnetic mouthpiece, fill the tobacco into the ceramic oven and then put the magnetic mouthpiece back on.
3. Adjust The Temp: click +/-, 1 click rise/fall by 1F, long press rise/fall by 10F.
4. Vape: Long press the power button for 2 secs, the device will vibrate once and start heating, vibrate twice when it reaches the set temp. Adjust temp during the vape session is allowed. Long press the power button again to stop with one vibration.
5. Charging: Type-C port. Fast charging not supported. Charging time around 2.0 hour, light goes off once fully charged.

Protection:

1. Auto Shutdown: Auto shutdown after 0.5 Hour.
2. High Temp Protection: Automatically stop heating once temperature reached 300°C.

	Power On.
	Power OFF.
	Start heating.
	Reaches the set temp.
	Please charge the device.
	Short circuit.
	Battery indicates: Green light ≥ 60% 20% ≤ Yellow light < 60% Red light < 20%
	Charging.