


Yo^{can}



DIRK

Instruction Manual

How To Use:

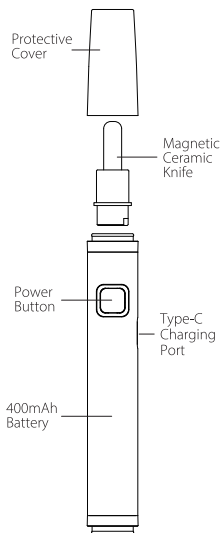

1. Turn on/off: 5 times click.
2. Adjust the voltage: 3 times click
● Blue light: 2.6V
● Green light: 3.2V
● Red light: 3.8V
3. Working: press and hold the power button.
4. Charging: Type-C port. Fast charging not supported. Charging time around 1.0 hour, light goes off once fully charged.

Specification:

Size: 14.2*111mm
Resistance: 2.0 Ω
Battery Capacity: 400mAh
3 Voltage Levels: 2.6V-3.2V-3.8V
Safety Cut-off: 15 Seconds
Charging Type: 5V/1A Type-C
Charging Time: 1.0h

Protection:

1. Auto shutdown after 30mins.
2. Safety cut-off: 15s
3. No load: blue light slowly blink 3 times.
4. Short-circuit: red light quickly flash 5 times.
5. Low battery: red light quickly flash 10 times and stops working.
6. Over charge protection.

Caution:

Keep the device away from any environment involving strong acids, alkaline, combustible materials, water, or any other liquids.
Do not keep in hot cars or store above the room temperature of 74°F.
Do not use damaged batteries. If the battery casing is damaged, discontinue use and safely recycle the battery.

Do not use the battery if contacts become exposed to solid or liquid matter.
Shorts can result in fire or an explosion of a battery.
Do not touch coils when hot. Severe burns can result.
Do not touch hot material. Severe burns can result.
If the device gets too hot in use, please stop using it for a while.
Not intended for tobacco or nicotine use.
Not an ENDS device.

Disclaimers:

People under 21 years of age are not permitted to purchase or use this device.
Non-smokers, children, and women breastfeeding should not use this product.
The device is not a medical device and is not intended to diagnose, cure or prevent any diseases or other conditions.
The manufacturers and sellers will not be responsible for any consequential or incidental damage resulting from the sale or use of any merchandise.